



Rotary Crusher GT 135 + 155



Rotary Crusher GT135/GT155

PARTS

12. Edition – January 2016

Please ensure that this manual is handed to the operator before using the machine for the first time. If the machine is resold the Parts list must be given to the new owner!

The information contained in this Parts list is correct at the time of publication. However, in the course of constant development, changes in specification are inevitable. Should you find the information given in this book different to the machine it relates to please contact the "After Sales Department" for advice



Merkurvej 25
DK 6000 Kolding
Danmark
Tlf: +45 75553644
Fax: +45 75554243
Email: info@greentec.eu
http: www.greentec.eu

Contents

Contents	4
Introduction	5
Useful information	6
Ordering parts	7
Spare Parts	8

Introduction

Dear customer!

Your new GreenTec machine is constructed with background in more than 20 years experience with tractor mounted machines to maintenance of green areas. This machine is produced by the latest technology and recognized safety regulations, standards and regulations.

We want to make a product available in such a way, that neither the use of the machine during transportation or maintenance of the machine causes any damage or misunderstandings.

This parts list contains information that are important and useful for maintaining your GreenTec machine's reliability, dependability and value.

You are welcome to visit our website www.greentec.eu - where the login via the dealer's access gives you the latest updates on instructional and part books on our entire product range. The password for dealer log-in: PUBLISHER

We hope, you will be pleased with your new GreenTec machine.

Best regards,



John Christensen
Sales Director GreenTec A/S



GreenTec's vision is to develop and sell quality machines for the maintenance of green areas, including in agriculture, in industry, at airports and in the local sector. Through innovative product development, we will strive to become a leader in our field.

All machines are developed in a simple and functional design in close cooperation with dealers and end users. It is our goal to cover every need in the market segment with preferably 2 different solutions. In-depth analysis of requirements and serious advice to the customer is offered the best solution, where individual needs can be met through the modularity of the product program. Our goal is also to offer the best possible after sales service, and a quick and efficient spare parts supply.

Useful information

Before using the machine for the first time, it's the seller's responsibility that the buyer is given this parts list. If the machine is resold, the parts list must be transferred to the new owner.

Please fill out the list below to ensure that the necessary information is at hand when ordering spare parts etc.

Serial No

Delivery date

Dealer

Tlf./ E-mail



Merkurvej 25
DK 6000 Kolding
Danmark
Tlf: +45 75553644
Fax: +45 75554243
Email: info@greentec.eu
http: www.greentec.eu
Opening hours: Mon-Fri 8-16

Ordering parts

When ordering parts please refer to your parts list to help your dealer with your order.

Part number and quantity
Description
Machine model number
Serial number of the machine
Delivery instructions (e.g. next day).

Delivery is normally via carrier direct to your dealer. Please check with your dealer for stock availability and arrangement of dispatch. Ensure you or your dealer has sufficient cover for parts requirement outside factory hours.

 
Important Note

The information contained in this manual is correct at the time of publication. However, in the course of constant development, changes in specification are inevitable. Should you find the information given in this book different to the machine it relates to, please contact the "After Sales Department" for advice.


Key:

(LH)	=	Left hand
(RH)	=	Right hand

Spare Parts

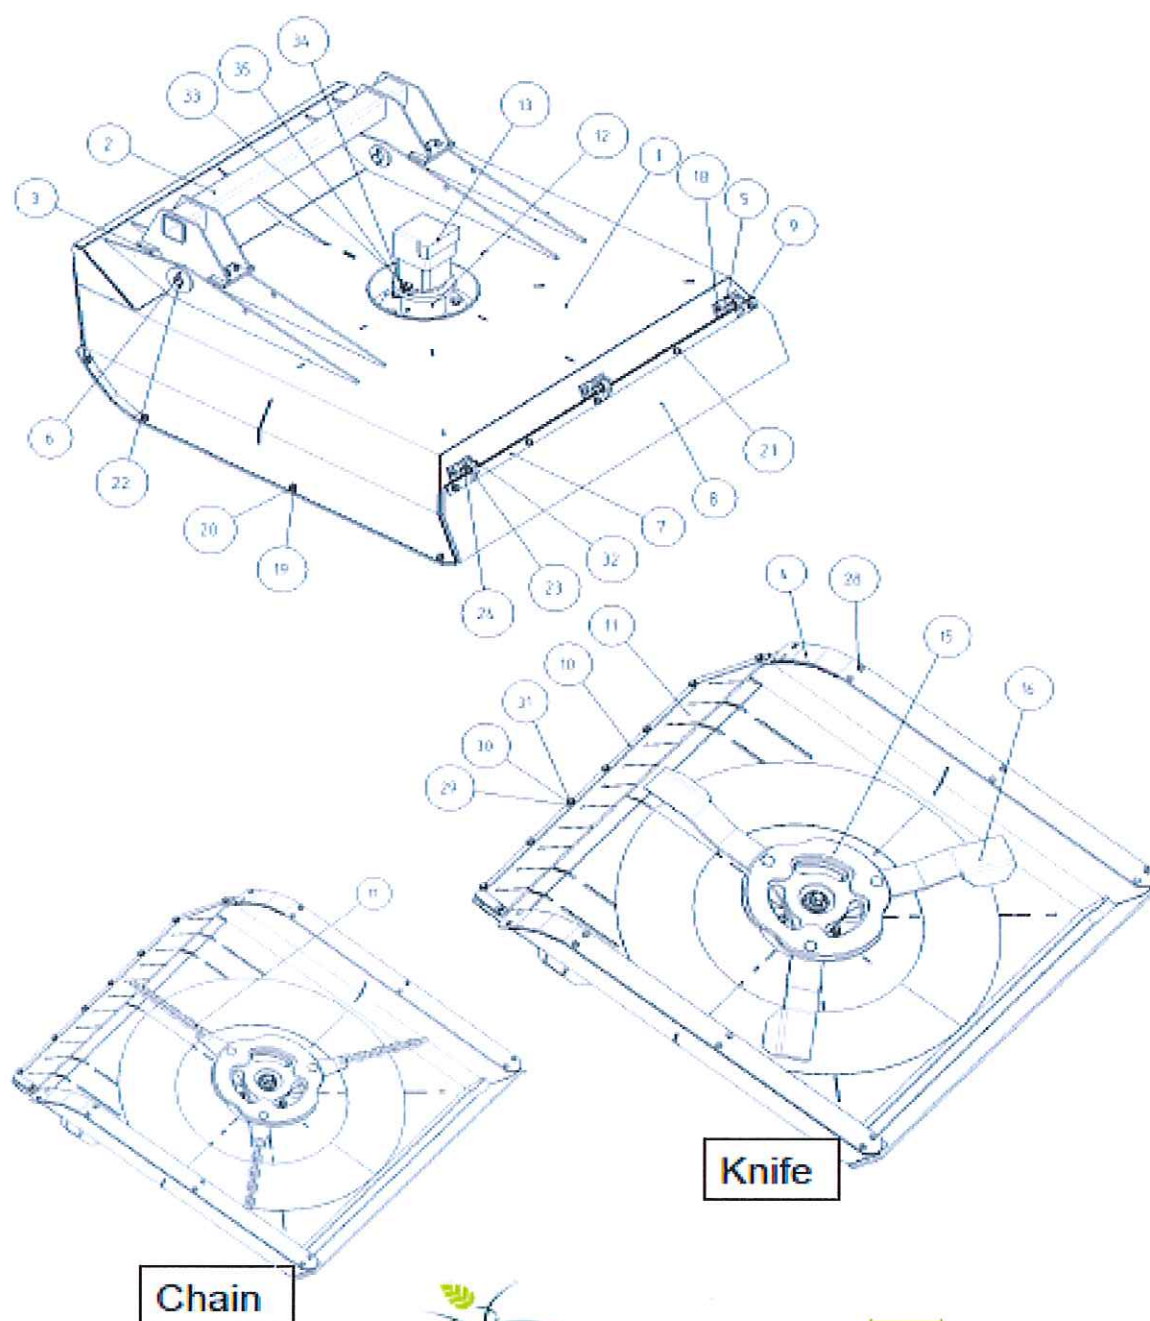


2

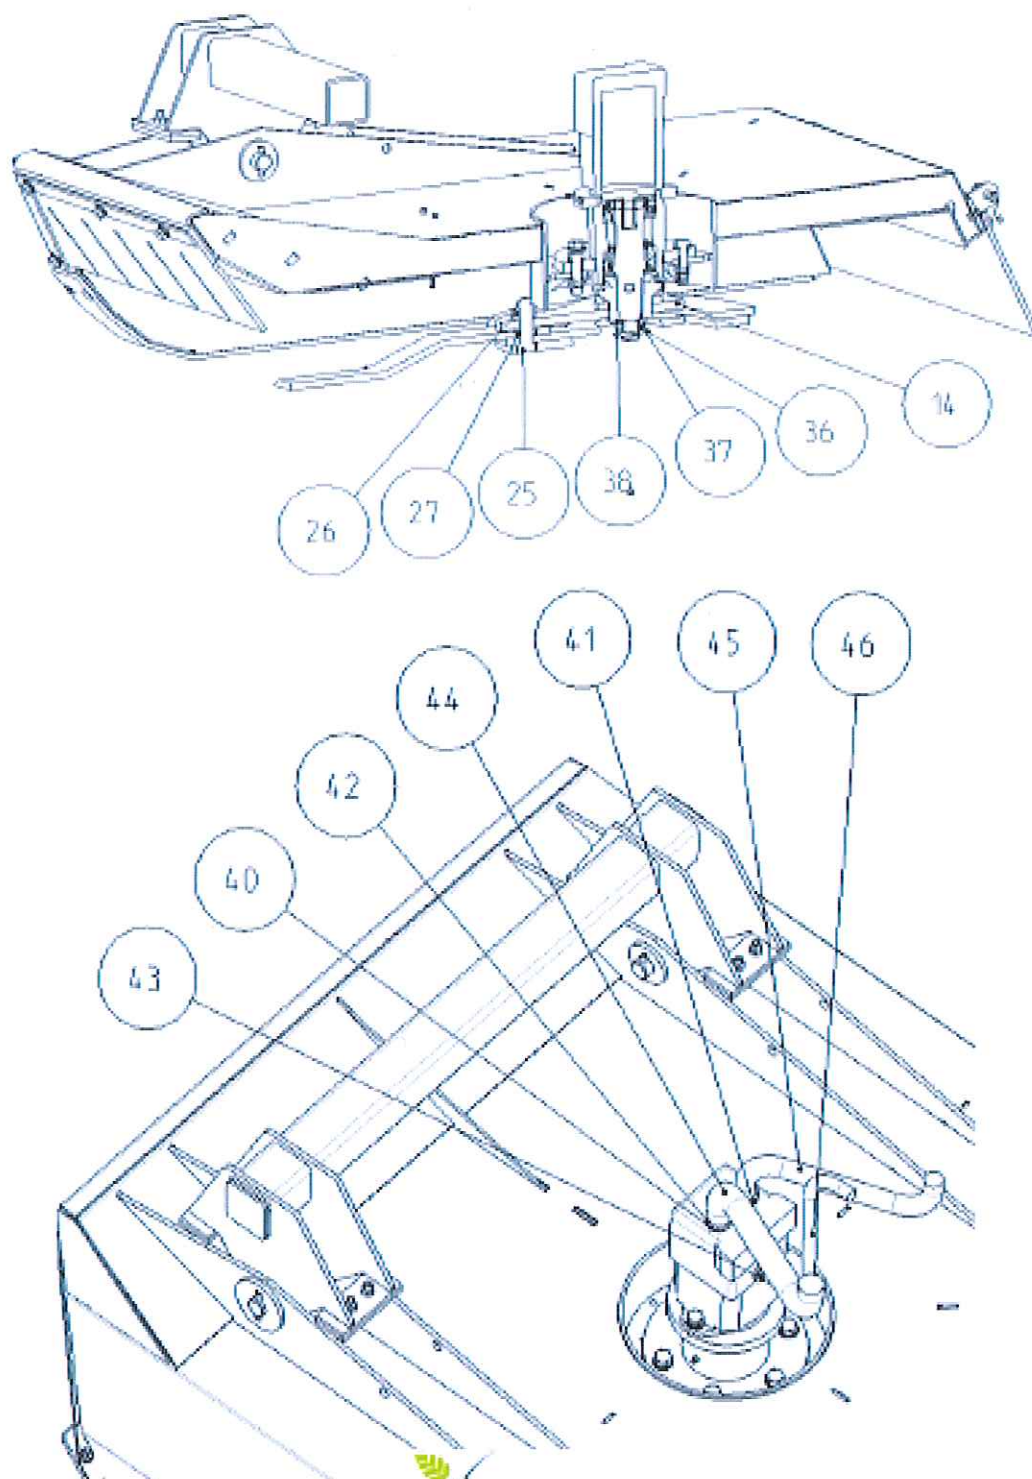 

Ref.	GT135	GT155	Q	English Descr.	German Description	comment
1	8821501	8831525	1	Housing	Gehäuse	
2	8821530	8831526	1	Adapter top	Konsole oben	
3	8821503	8821503	4	Stopper	Anschlag	
4	8821504	8831524	2	skid	Gleitkufe	
5	8821505	8821505	3	Hinge-joint	Scharnier	
6	8822506	8822506	2	Bolt	Bolzen	
7	8821507	8831523	1	Hinge-joint back	Scharnier hinten	
8	8828508	8838509	1	Rubber	Gummi hinten	
9	8821509	8831519	1	Flat Steel	Flachelsen	
10	8821511	8831518	1	Flat Steel	Frontflachelsen	
11	8828512	8838510	1	Front rubber	Frontgummi	
12	8824517	8824517	1	Motor adapter	Motoraufnahme	
13	8823001	8823001	1	Oil motor	Ölmotor	
13a	8823001.2	8823001.2	1	Sealing set motor	Dichtsatz Motor	
14	8821527	8821527	1	Rotor welded	Rotor geschweißt	
15	8822515	8822515	1	knife holder	Messerhalter	
16	8827001	8837001	3	Rotor knife	Rotormesser	Option
17	8827003	8837003	3	Chain flail	Kettenschlegel	Ø10
17a	8827002	8837002	3	Chain flail	Kettenschlegel	Option Ø13
18	2770506	2770506	6	Counter sunk screw	Senkschraube DIN7991	M12x30
19	2770436	2770436	18 / 20	Disc	Scheibe DIN125	B10
20	2770412	2770412	21 / 23	Hex-nut	Sechskantmutter DIN985	M10
21	2770396	2770396	13	Hexagon head bolt	Sechskantschr. DIN933	M10x35
22	1481100502	1481100502	2	Locking pin	Spannstift DIN1481	10x50
23	2770454	2770454	18	Disc	Scheibe DIN125	B16
24	985162	985162	9	Hex-nut	Sechskantmutter DIN985	M16
25	2770413	2770413	3	Hex-nut	Sechskantschraube	M24
26	2770414	2770414	3	Hex-nut	Sechskantmutter DIN985	M24
27	8827601	8827601	3	Bushing	Buchse	
28	2770509	2770509	8 / 10	Counter sunk screw	Senkschraube DIN7991	M10 x 25
29	2770434	2770434	8	Disc	Scheibe DIN125	B12
30	127B122	127B122	8	lockwasher	Federring DIN127	B12


Ref.	GT135	GT155	Q	English Descr.	German Description	comment
31	2770484	2770484	8	Hexagon head bolt	Sechskantschraube DIN933	M12x25
32	933160602	933160602	9	Hexagon head bolt	Sechskantschraube DIN933	M16x50
33	933140402	933140402	2	Hexagon head bolt	Sechskantschraube DIN933	M14x40
34	125B142	125B142	2	Disc	Scheibe DIN125	B14
35	127B142	127B142	2	Lockwasher	Federling DIN127	B14
36	2770477	2770477	1	Pin	Spilint	
37	5771409	5771409	1	Nut	Sicherungsmutter	M30
38	5771410	5771410	1	Disc	Scheibe	
39	8777516	8777516	2	Cover	Abdeckkappe Vierkantröhr	
40	PP45-F	PP45-F	3	Sealing	Dichtung	
41	01BP12	01BP12	1	Fitting	Verschraubung	½" – ½"
42	02BP1612	02BP1612	1	Fitting	Verschraubung	½" – 1"
43	02BP1206	02BP1206	1	Fitting	Verschraubung	½" – 3/8"
44	8823002	8823002	1	Tube	Schlauch 1"	Lg 1000
45	8823003	8823003	1	Tube	Schlauch ½"	Lg 1000
46	8823004	8823004	1	Tube	Schlauch 3/8"	Lg 1200

 Automatic chain holder

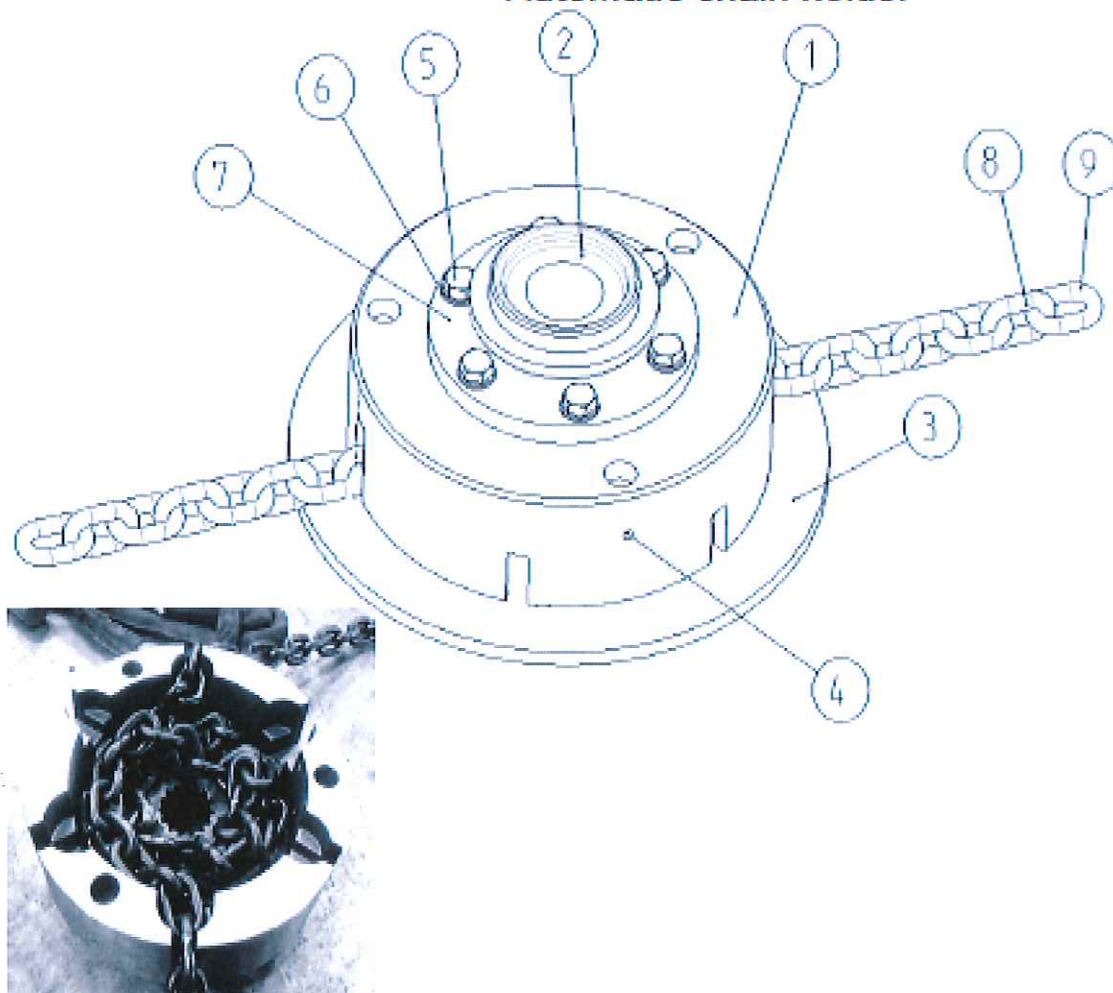

Ref.	GT135	GT155	Q	English Descr.	German Description	comment
1	8621529	8621529	1	Chain holder	Kettenhalter	
2	8621530	8621530	1	Connecting flange	Anschlußflansch	
3	8621528	8621528	1	cover	Deckel	
4	1113060030	1113060030	3	Spring pin	Stannstift	Ø6 x 30
5	2770397	2770397	6	Hexagon screw	Sechskantschraube	M12 x 60
6	2770436	2770436	12	Washer	Scheibe	B13
7	2770574	2770574	6	Hexagon nut	Sechskantmutter	M12
8	0400001000	0400001000		10mm chain	10mm Kette	
9	0400001300	0400001300		13mm chain	13mm Kette	

 Kompl. Lagerhus: 8824517.0

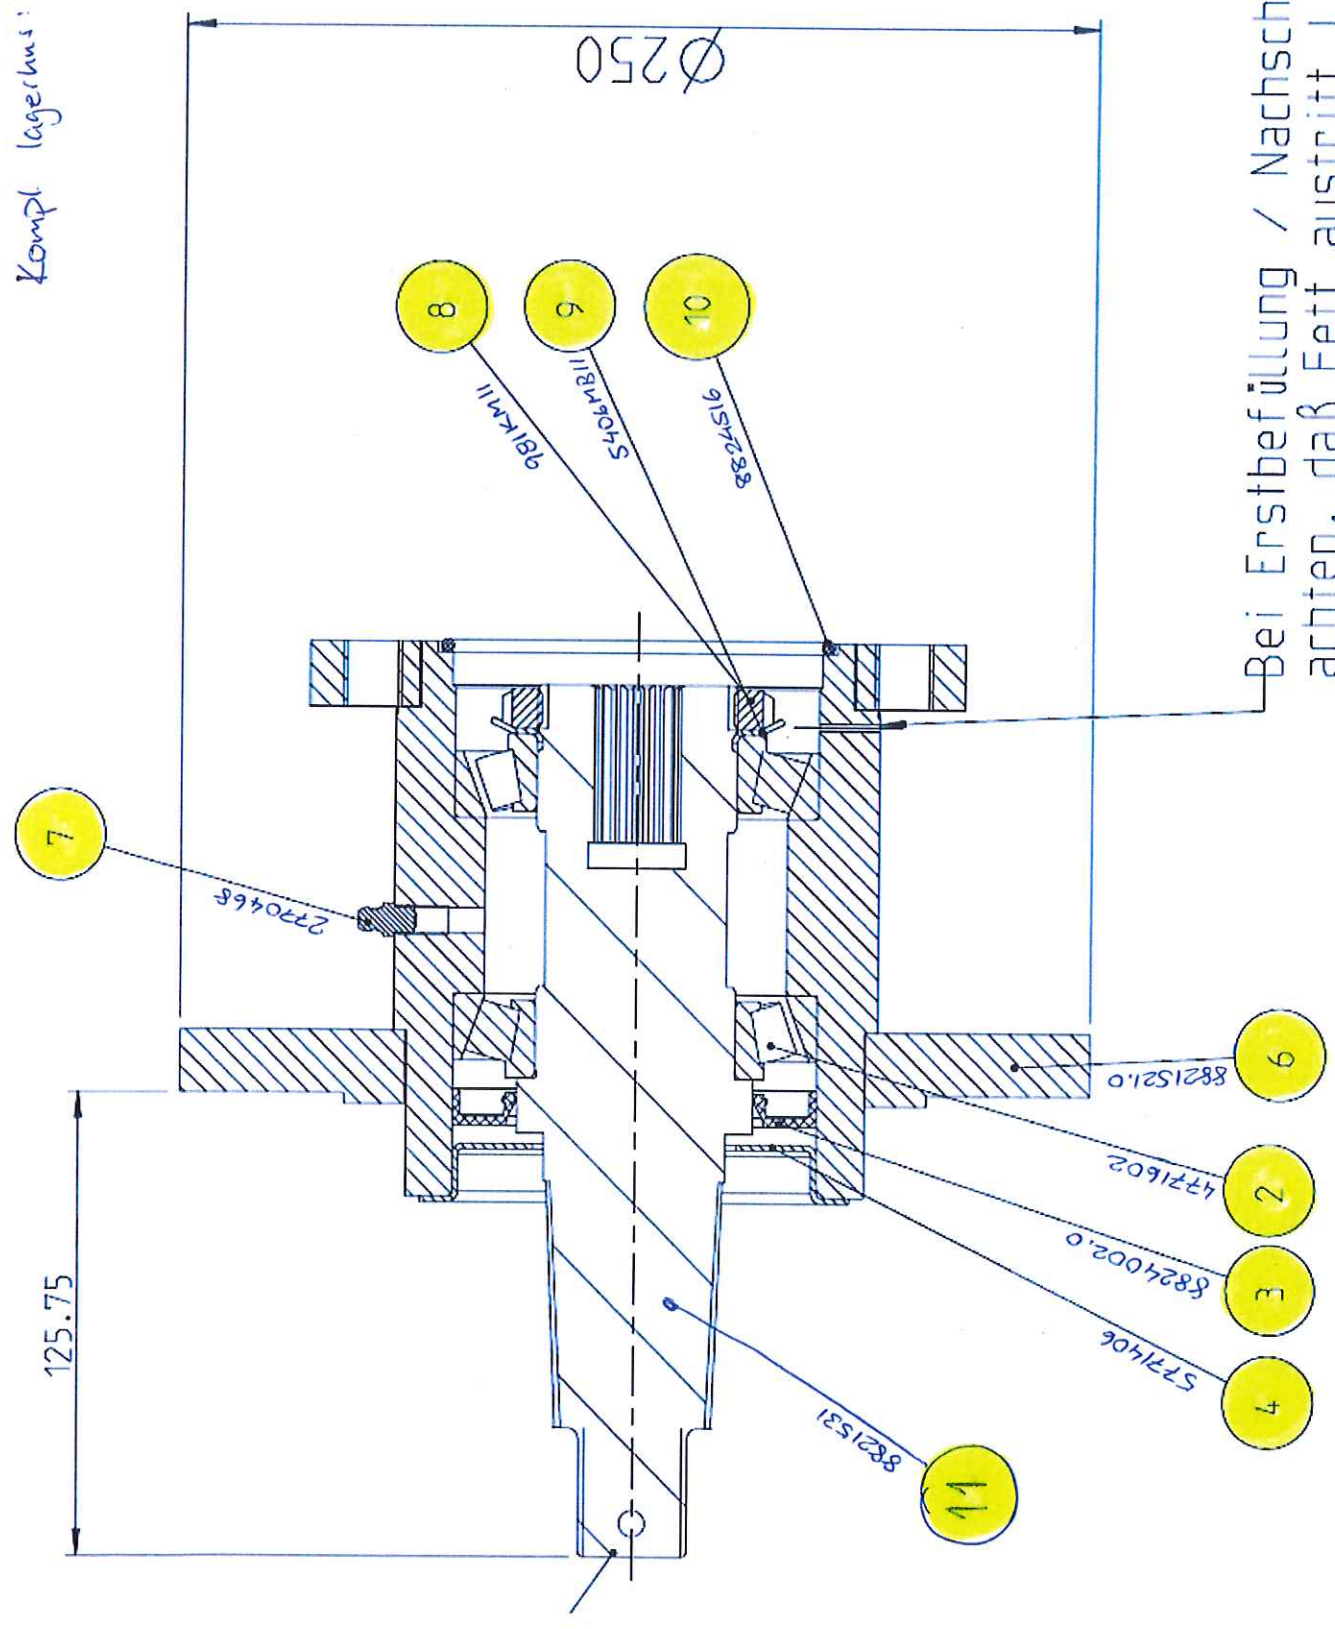

Bei Erstbefüllung / Nachschmierung
achten, daß Fett austritt !



Motor levererad som reservdel:

Denna motor levereras alltid standard som tillverkaren Bondioli har monterat den från fabrik.

Denna motor används till olika Spearhead-maskiner så det kan hända att rotationsriktningen måste ändras.

Detta görs genom att skifta tryck (P) och retur (T) slangarna från bäraren samt genom att byta/skifta sida på övertrycks-/anti-cavitations-ventilen, se nedan.

Denna ventil ska ALLTID sitta monterad på tycksidan (P).

Kom ihåg !!!!! Fyll upp motorn med olja inna uppstart.

